

SOLE™

THE PERFECT FOOTBED FOR YOU

Three levels of thickness means SOLE has the perfect footbed for you. We recommend choosing the thickness of the insole based on the volume of your shoe.

THIN

No Softec cushioning



Ideal for tight-fitting, low profile footwear with thin or no factory insoles such as slim-fitting dress shoes, casual shoes, slim running shoes, cycling shoes, cleats and ski boots.

MEDIUM


1.6mm Softec cushioning



Ideal for most average-volume footwear and shoes with standard factory insoles such as running shoes, sneakers, basketball shoes, tennis shoes, loafers and casual shoes.

THICK

3.2mm Softec cushioning

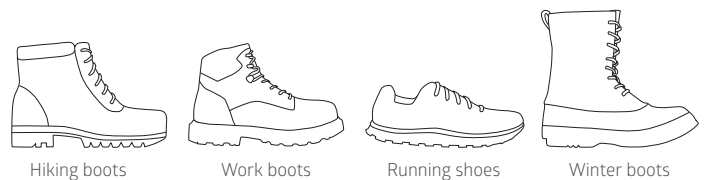

Ideal for footwear with wiggle room, thick factory insoles and a wider shape such as hiking boots, work boots, loose-fitting running shoes and winter boots.